


Lee-Enfield No. 4 Rifle

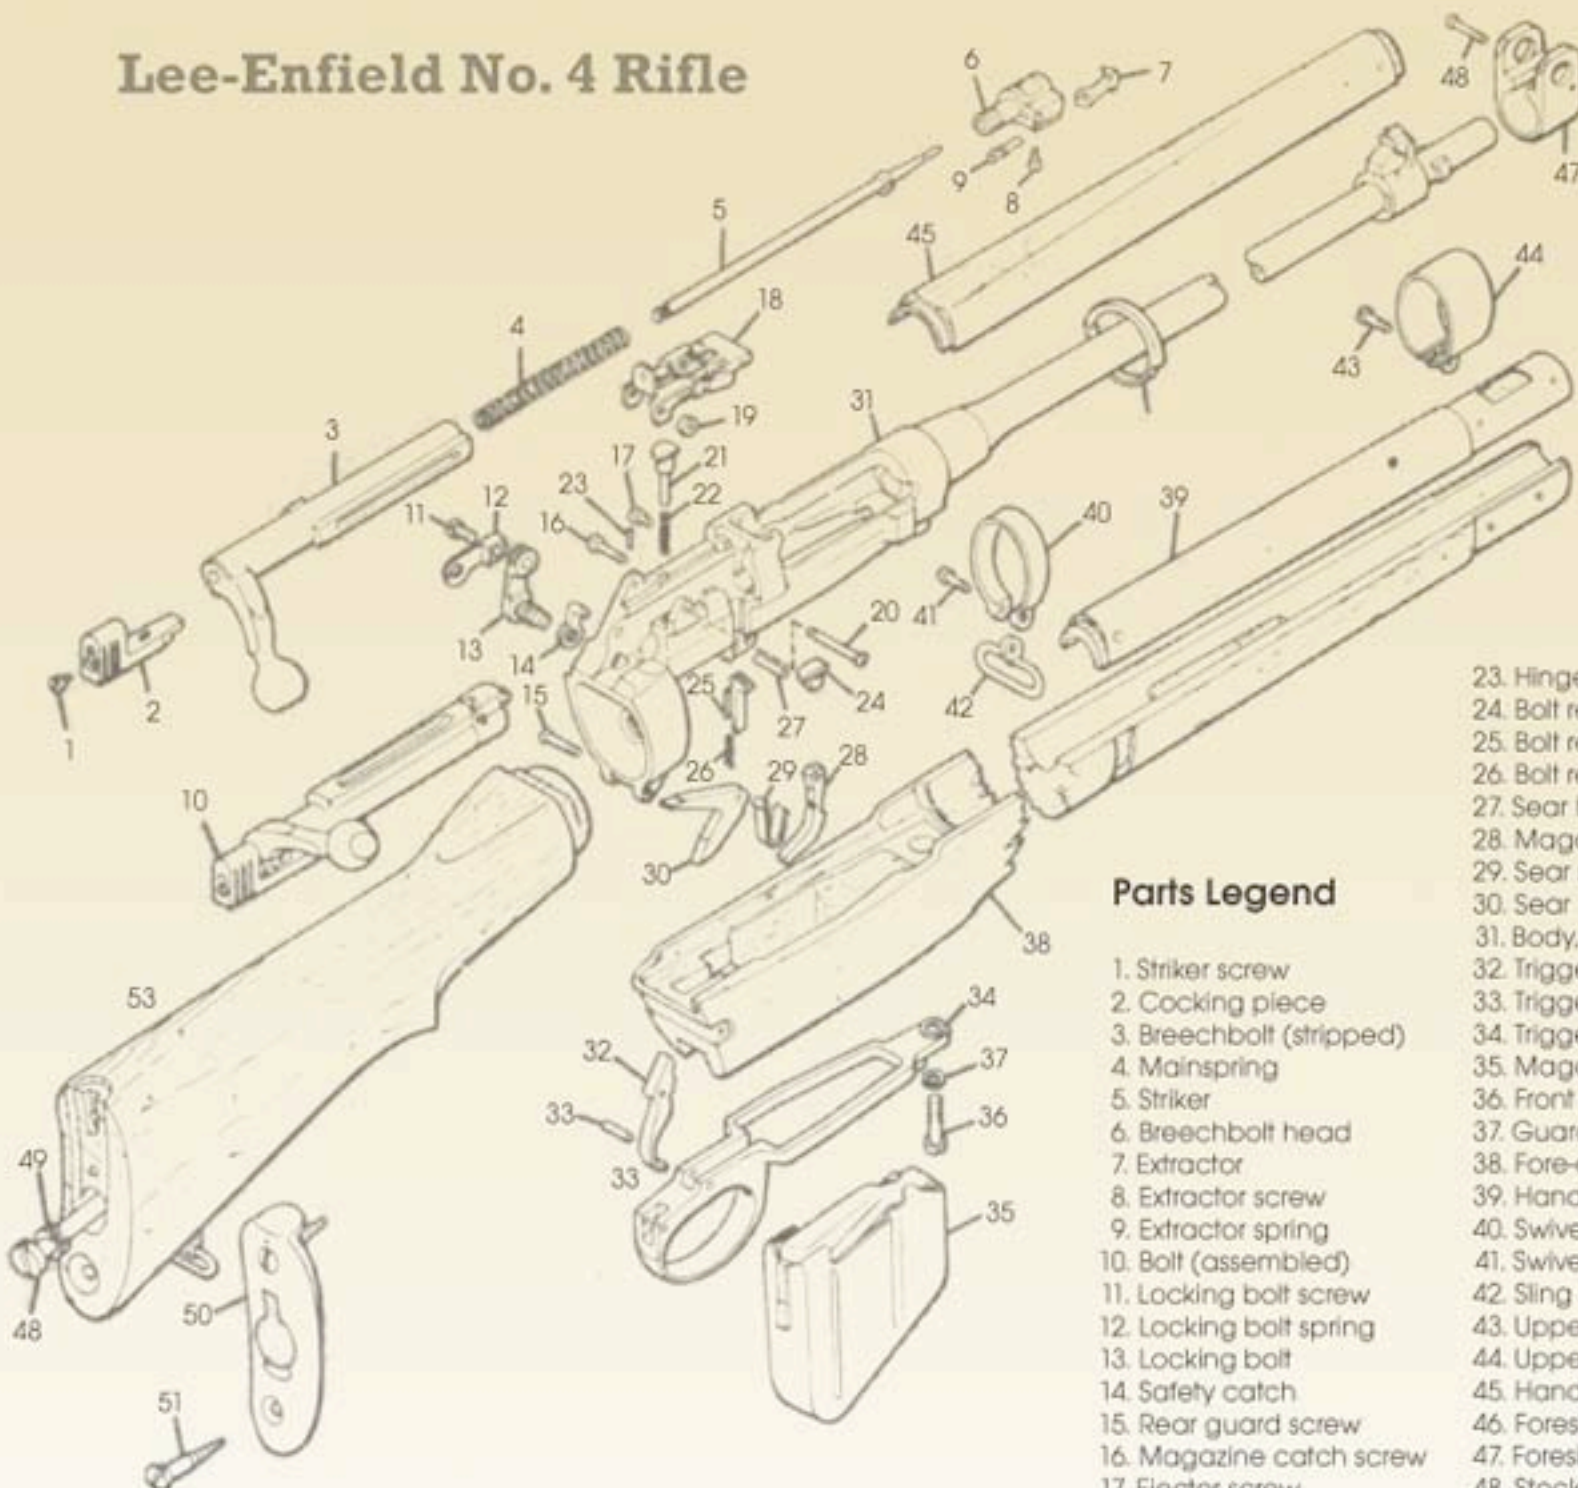

Parts Legend

- | | |
|--------------------------|---------------------------------|
| 1. Striker screw | 23. Hinge pin lock pin |
| 2. Cocking piece | 24. Bolt release stop |
| 3. Breechbolt (stripped) | 25. Bolt release |
| 4. Mainspring | 26. Bolt release spring |
| 5. Striker | 27. Sear hinge pin |
| 6. Breechbolt head | 28. Magazine catch |
| 7. Extractor | 29. Sear spring |
| 8. Extractor screw | 30. Sear |
| 9. Extractor spring | 31. Body, No. 4 Mk I (receiver) |
| 10. Bolt (assembled) | 32. Trigger |
| 11. Locking bolt screw | 33. Trigger pin |
| 12. Locking bolt spring | 34. Trigger guard |
| 13. Locking bolt | 35. Magazine |
| 14. Safety catch | 36. Front guard screw |
| 15. Rear guard screw | 37. Guard screw lock washer |
| 16. Magazine catch screw | 38. Fore-end |
| 17. Ejector screw | 39. Handguard, front |
| 18. Mk III rear sight | 40. Swivel band |
| 19. Spacer | 41. Swivel band screw |
| 20. Rear sight hinge pin | 42. Sling swivel |
| 21. Sight detent plunger | 43. Upper band screw |
| 22. Detent spring | 44. Upper band |
| | 45. Handguard, rear |
| | 46. Foresight protector screw |
| | 47. Foresight protector (Mk II) |
| | 48. Stock bolt |
| | 49. Stock bolt washer |
| | 50. Buttplate |
| | 51. Buttplate screw (2) |
| | 52. Lower band |
| | 53. Buttstock |